



















KEWAUNEE

Colors • Stains • Kemresin® Finishes



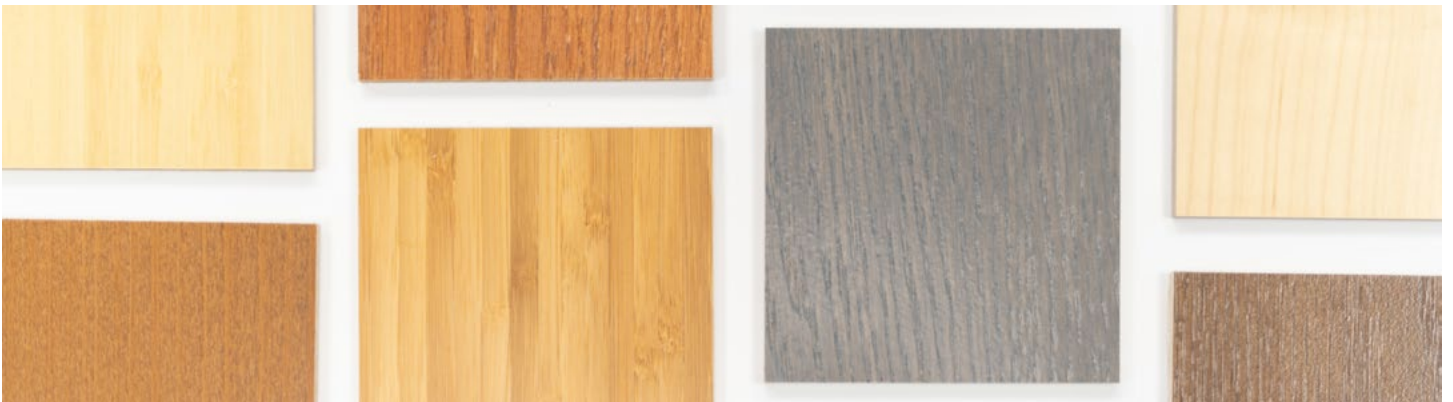

METAL COLORS

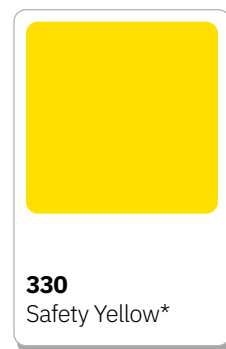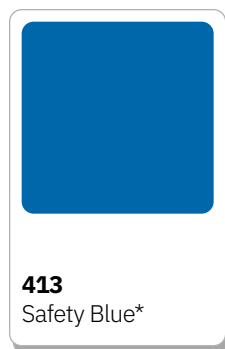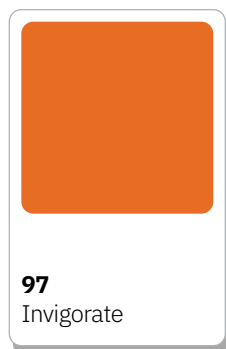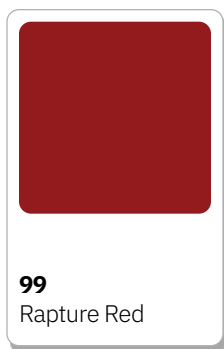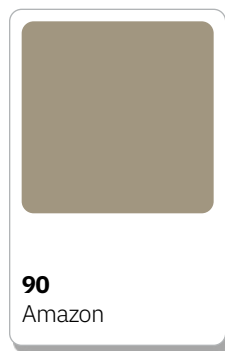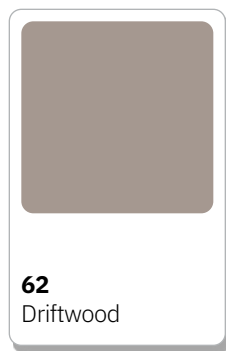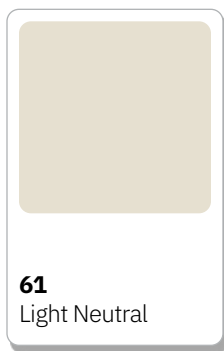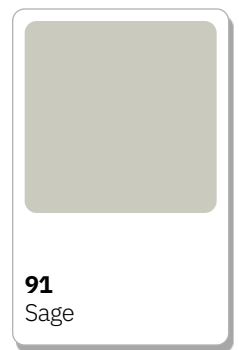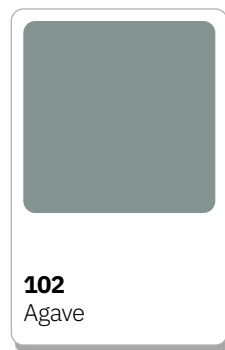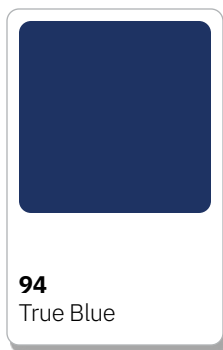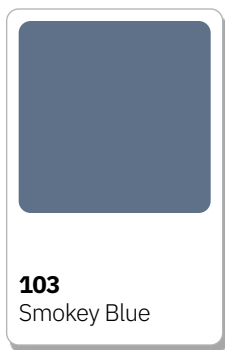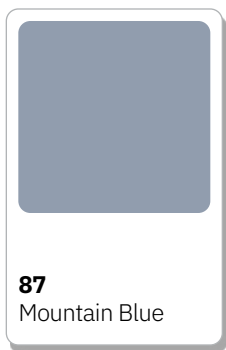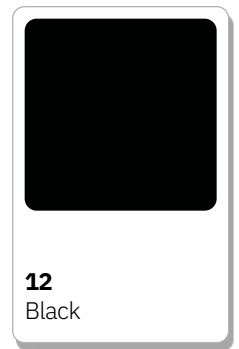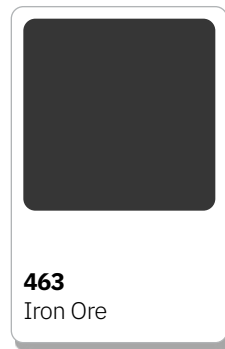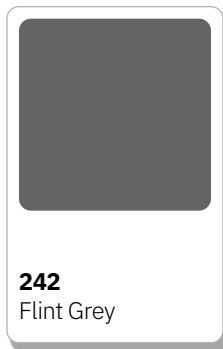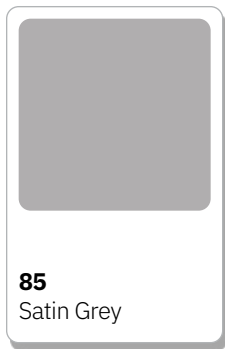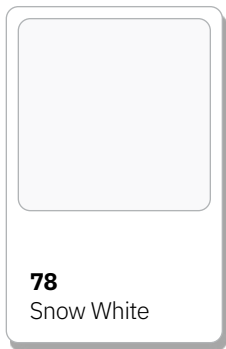

Colors in print and on screen may not be accurate. Always refer to physical samples for final selection.
*Safety Yellow and Safety Blue are applicable to safety cabinets only.

WOOD STAINS

Red Oak Veneers



102
Seaside Oak



103
Sherwood Oak



104
Woodland Oak



108
Winchester Oak



109
Chickory Oak



110
Carolina Oak



111
Barnwood Oak

WOOD STAINS

White Maple Veneers



201
Natural Maple



202
Seaside Maple



204
Woodland Maple



209
Chickory Maple

Steamed Beech Veneers



608
Winchester Beech



609
Chickory Beech



610
Carolina Beech




611
Barnwood Beech


KEMRESIN® EPOXY RESIN





Worktop
Kemresin® Grey

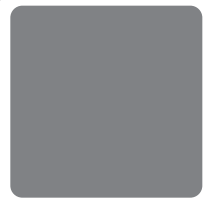

Worktop
Kemresin® Slate

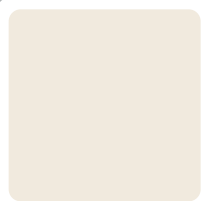

Worktop
Kemresin® Putty

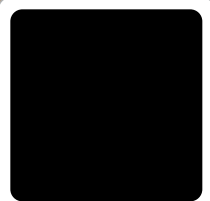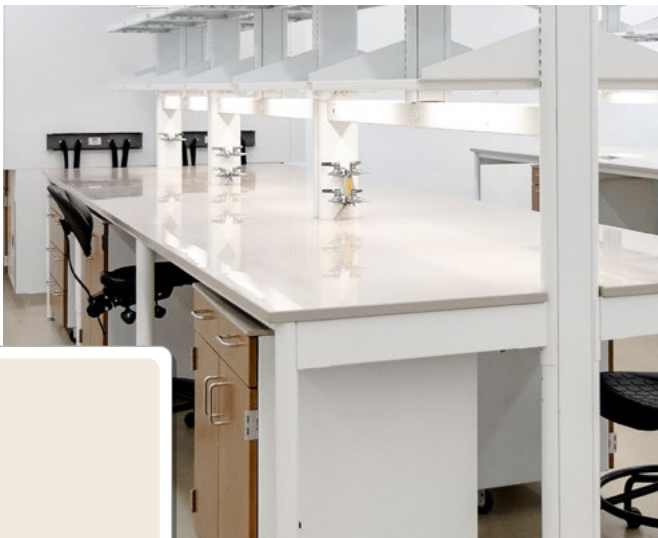

Worktop
Kemresin® Black



Colors in print and on screen may not be accurate. Always refer to physical samples for final selection.





FROM START TO FINISH

The partnership between Kewaunee and its laboratory furniture dealers provides total laboratory solutions from start to finish. Whether your project involves a brand-new, multi-story research center or the renovation of an existing lab, you receive a full range of services, from design and engineering to final installation and startup.



Contact your dealer representative for physical samples. Visit kewaunee.com to find a representative near you.

Access our library of design, BIM (Revit), technical resources & sustainability certifications at portal.kewaunee.com.

